

# Tag Piccolino v2r5

## User Manual

### 1 Switch the Tag On



<b>Dimensions</b> (without enclosure)	29 x 37 x 11 mm
<b>Weight</b>	26 g
<b>Refresh Rate</b>	50ms – 60s
<b>Battery Lifetime*</b>	Up to 5 years
<b>CR2450 Battery Capacity</b>	600mAh
<b>UWB Range</b>	15-50m
<b>Temperature Range</b>	0 - 50°C
<b>For Indoor Use Only</b> 	

\*depends on RF Profile settings, can be significantly prolonged with the movement detection feature

- 1) Insert the coin battery (type CR2450) into the Tag. The battery needs to be inserted with the negative terminal facing the circuit board. **Caution: inserting the battery in the opposite way may indefinitely damage the device.**
- 2) After inserting the battery, red LED indication lights up for one second. This means that the Tag is active.

If the LED only blinks or does not light up at all, it means that the battery is discharged. In that case, you need to replace the battery with a new one.

### 2 Default Configuration

<b>FW</b>	<b>3.118</b>	<b>3.118 (from 1.10.2018)</b>
<b>Blink Channel</b>	5	5
<b>Blink RF Profile</b>	RF3	RF4
<b>Accelerometer Mode</b>	Immediate Sleep	Immediate Sleep
<b>Refresh Rate</b>	1 s	1 s