

Tag Li-ion Mobile RTLS locator

Features

- Real-Time Location with UWB and TDoA Technique
- Movement Detection / Sensor Data
- Identification, unique MAC address
- Decawave UWB Radio, 3-7GHz
- Wireless Tag Configuration via RTLS Studio
- Rechargeable Battery Li-Pol 560 mAh
- Firmware Upgrade and Charging via USB
- User LED and Charging LED indication



Li-Ion Tag v4v4

Tag is an active mobile locator. Its position is reported within selected refresh rate. Tracked objects need to be equipped with this device.

Tag Li-ion provides positioning data, 3D spatial orientation as well as the raw sensor output from inertial sensors, pressure, and temperature sensor. It also implements movement detection feature to prolong battery lifetime. Location and sensor data are provided through open API.

Tag Li-ion is powered from rechargeable battery and wirelessly configurable through RTLS Studio web interface. Tag is equipped with DecaWave UWB radio with an integrated omnidirectional antenna.



Dimensions	70x50x21 mm
Weight	25g
Refresh Rate	10ms - 60s
Battery Lifetime*	10s – 5 years
·	1 s – 1 year
	500ms – 248 days
	100ms – 53 days
Nominal Battery	560mAh
Charge Time via USB	Approx. 6h
Charge Current	100mAh
UWB Range	15-50m
Temperature Range	0 – 50°C
For Indoor Use Only	

^{*}depended on RF Profile settings, can be significantly prolonged with the movement detection feature



Outline

Tag	g Li-ior	1	1				
1	Pow	er up	3				
2	Tag	Behavior	3				
2	2.1	Basic Blink Messages	3				
2	2.2	Motion detection and Sleep modes	4				
3	Tag	Charging	5				
4	Cha	nnel Utilization	5				
5	RF F	Profiles	6				
į	5.1	RF Profile Selection	6				
6	Batt	ery Lifetime Estimation	7				
6	3.1	Power Consumption	7				
7	Tag	Default Settings	8				
8	Wire	less Configuration	9				
8	3.1	RTLS Studio version 1.3.2 and lower	9				
8	3.2	RTLS Studio version 1.4.0 and higher	. 10				
9	Res	et Tag to Defaults Settings	. 13				
10	10 Firmware Upgrade						
11	Firm	ware Changelog	. 17				



1 Power up

- 1) Switch on the Tag.
- 2) User LED should light up for 1 second.
- 3) If the User LED just blinks or does not light up at all, it means that the battery is discharged.

2 Tag Behavior

- 1) Tag is initialized after the switch is set to the ON position. If the battery is low, it goes to sleep mode immediately, otherwise it goes directly to step 2.
- 2) There is a two second RX window after initialization for receiving the wireless configuration.
- 3) Tag sends location blink message periodically with a given refresh rate. This message is received by set of Anchors. It is then forwarded to the RTLS Studio via Ethernet of WiFi backhaul, where position is calculated. Blink can be optionally equipped with sensor data. All the data is further disseminated trough the API.

		Tag Switch ON	Init	Wait for Wireless Config (2s)	Send Blink Message	Sleep	Send Blink Message	Sleep		_
--	--	---------------	------	-------------------------------	--------------------	-------	--------------------	-------	--	---

Optional – Sleep mode can be interrupted by periodical reception. This provides an option when the Tag needs to be reconfigured remotely. However, it comes with a price of increased power consumption. Read more info in the Wireless Configuration section. *This feature is available from FW 3.118*.

2.1 Basic Blink Messages

Blink messages are briefly described in table below.

Blink Message	Frequency	Payload		
Standard blink	Set by refresh rate parameter	Blink sequence number and MAC address only		
Battery blink	Every 15 th blink	STD blink content + battery level		
Info blink	After power-up three info blinks	Battery blink content + info about: Tag Type, HW &		
are sent. Then every 15 th battery		FW versions, user settings of the Tag's parameters		
	blink	and mounted sensors		
Extended blink	Set by refresh rate parameter	Blink with sensors data		

Table 1:Blink Types

For more detailed information about Tag messaging please read AN11, AN12 Custom Tag Integration.




2.2 Motion detection and Sleep modes

Motion detection utilizes the accelerometer's data to detect, whether the Tag is moving or not. This information gives the Tag possibility to go into sleep mode once it is stationary. This brings two benefits: it prolongs the battery lifetime and decreases communication workload over the channel.

Tag has four sleep mode options

- Disabled
- Delayed sleep
- Immediate sleep
- Keep alive

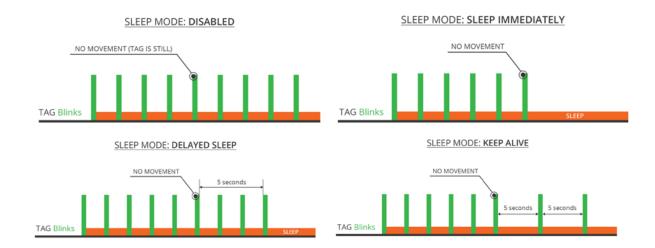

Disabled - Tag send blink message regularly and movement detection is inactive.

Delayed sleep (5s)

Once no movement is detected, tag remains sending blinks for a 5 second period and then go into sleep mode. This mode can be useful in scenarios when accurate position is required at the spot where tag was stopped.

Immediate sleep

Tag is put into deep sleep immediately after no motion event is detected.

Keep alive (5s)

Tag is put into sleep immediately after no motion event is raised, still it sends blink every 5 seconds. After the blink is sent, the tag is put back into deep sleep. This feature is useful for static tag tracking. *This mode is available from FW 3.118.*



3 Tag Charging

Charging is done via USB cable with a max. current of 100mA. The device can be charged only at temperatures between 4°C and 40°C. Never charge the device below 4°C.

Warning: This device contains lithium polymer battery; it must be handled with care and there is a flammability hazard if the package is damaged.

4 Channel Utilization

The Tag sends blinks periodically plus a random offset through a so-called ALOHA channel access method. However, once more Tags are in the same radio range their positions are estimated by the same set of Anchors and if they transmit at the same time, collision occurs. In this case, positions cannot be calculated. Therefore, one needs to think about the channel utilization for a given application. The table below shows the total Tag number for a given RF profile and refresh rate.

Please keep in mind that the number of Tags calculated below applies for the multiple Tags in the same radio range (location cell). There is no limitation for total number of Tags running across the whole system.

Tag RF profile / Tag Refresh Rate	Blink TX Time [ms]	10s (0.1 Hz)	1s (1 Hz)	0.5s (2 Hz)	100ms (10Hz)
RF0, RF3	2.3	782 Tags	78 Tags	39 Tags	7 Tags
RF1, RF4	0.432	4166 Tags	416 Tags	208 Tags	41 Tags
RF2, RF5	0.175	10285 Tags	1028 Tags	514 Tags	102 Tags

Table 2 Channel Utilization - Number of Tags in one location cell without collisions for a given RF profile

Calculation example: Probability of collision depends on the blink length. ALOHA access method has 18% limit where there is high probability of transmissions without collisions. Let us calculate an example where tags have the same refresh rate 1s and RF0 profile is used. Blink time for this profile is 2.3ms. Therefore, the number of Tags within the same physical vicinity without collisions is 78 (1000ms/2.3ms*0.18).

Once the blink message is equipped with sensor data, the utilization of the radio channel will be higher with the same RF profile and Refresh rate. The following table shows the maximum Tag number for a given RF profile and refresh rate, if the quaternions are sent.

Tag RF profile / Tag Refresh Rate	Blink TX Time [ms]	10s (0.1 Hz)	1s (1 Hz)	0.5s (2 Hz)	100ms (10Hz)
RF0, RF3	2.64	679 Tags	67 Tags	33 Tags	6 Tags
RF1, RF4	0.468	3813 Tags	381 Tags	190 Tags	38 Tags
RF2, RF5	0.18	9917 Tags	991 Tags	495 Tags	99 Tags

Note: Sewio provides channel utilization spreadsheet for calculating customer scenario.



5 RF Profiles

Tag can operate in one of the six RF Profiles providing optimum performance for a given application. RF profile selection is a tradeoff between energy consumption, range and channel utilization. Tags and Anchors within the RTLS must be set to the same RF profile for blinks, otherwise the devices will not be able to communicate. For more info, please read the RTLS TDoA Technology Basic Principles document.

Here is a brief RF Profiles comparison, ordered from best to worst depending on the parameter:

Order	Channel Utilization	Energy Consumption	Signal Robustness and Range
Best	RF2, RF5	RF2	RF3
		RF1	RF0
	RF1, RF4	RF5	RF4
		RF4	RF1
	RF0, RF3	RF0	RF5
Worst		RF3	RF2

Table 3 RF Profiles Comparison

5.1 RF Profile Selection

RTLS TDoA requires wireless synchronization of Anchors which is carried over the UWB channel. Therefore, the Anchor spends a small portion of time in synchronization period and rest of the time in a blink period. If both periods are selected to be on the same channel, the best practice is to set the sync period and blink period to non-interfering RF Profiles to avoid collisions. Please note that the blink period must be set equally between Tags and Anchors at all times.

Recommended profile allocation for the same channel: Sync period CH 5, RF0 and Blink period CH 5, RF4.

RF profiles are set through RTLS Studio -> RTLS Manager -> Tab Anchors Summary and Tab Tags Summary. Please see the Wireless Configuration section.

In the table below are listed profiles which may be used without interference.



RF profile	RF0	RF1	RF2	RF3	RF4	RF5		
RF0	×	×	×	\checkmark	\checkmark	\checkmark		
RF1	×	×	×	√	\checkmark	√		
RF2	×	×	×	✓	✓	√		
RF3	√	✓	✓	×	×	×		
RF4	✓	✓	✓	×	×	×		
RF5	✓	✓	✓	×	×	×		
✓		Without Interferences						
×			nterferend	ces occur	S			

Table 4: RF profiles interferences

6 Battery Lifetime Estimation

The table below shows battery estimation for a given RF profile and refresh rate. Sewio provides spreadsheet to calculate battery lifetime for given application.

Tag RF profile / Tag Refresh Rate	10s (0.1 Hz)	1s (1 Hz)	0.5s (2 Hz)	100ms (10Hz)
RF0	3 years	169 days	87 days	17 days
RF1	5.2 years	1.2 year	248 days	53 days
RF2	5.5 years	1.4 year	287 days	63 days
RF3	2.2 years	126 days	65 days	13 days
RF4	3.9 years	0.9 year	186 days	40 days
RF5	4.1 years	1 year	215 days	47 days

Table 5 Battery Lifetime for 600mAh Capacity – estimated as 8 hours of continuous transmissions per day. Can be further prolonged with the movement detection feature.

6.1 Power Consumption

During the operation, the device goes through several states with different power consumption. These states states are listed in Table 6. Current consumption in all states was measured in default Tag configuration.

State	Current consumption [mA]	Duration [ms]	Description
TX state	140	2.3	Standard blink sent
RX state	150	Dependent on user setting	Wait for wireless config
			message
UWB sleep, MCU active	7.36	0.078	Overhead
UWB idle, MCU active	23.6	5.4	Wait for XTAL stabilization
UWB sleep, MCU sleep	0.087	Dependent on Refresh rate	Sleep

Table 6 Power consumption in various states



7 Tag Default Settings

Tag can get back default settings after the device is reset.

Parameter	Value
Refresh Rate	100 ms
Channel	5
RF Profile	RF3
Sleep mode (previously Acc Mode)	Immediate sleep
Sleep threshold	Low (16 mg)
Random Deviation	Enable
Periodical RX	Disable
RX Duration	1000 ms
Sensors	Disable
Accelerometer Dynamic Range	±2 g

Note: Default settings can differ if customer requires custom configuration for its project.



8 Wireless Configuration

The configuration is transferred to the Tag via the UWB link from the selected Anchor. During the configuration, the Anchor is not available for location purposes.

Please watch our Tag Configuration Tutorial and Tag Features Tutorial videos.

8.1 RTLS Studio version 1.3.2 and lower

1) Open the RTLS Manager by clicking its icon in RTLS Studio:



2) Go to the Tag Summary tab. You will see a table for Tag configuration:

	Tag Wireless Configuration											
	Tag MAC	Refresh Rate [ms]	Channel	RF profile	TX power	Motion detection	Random dev	Sensors	Anchor	FW	Status	Update
Ì	ALL	300	Skip *	Skip ▼	Skip ▼	Skip ▼	Skip ▼	Skip ▼	Choose ▼	Choose ▼	N/A	Start/Stop

3) Select the Tag's address and set the parameter that you wish to change. You will have to select the Tag's firmware and also the Anchor that will upload the new configuration. You can either update one Tag or all Tags in the system based on the MAC address.

Following parameters can be set:

Parameter	Value	Description	
Tag MAC	ALL, Specific address	The address if the Tag you wish to configure	
Refresh rate [ms]	50ms – 60s	The Tag's refresh rate	
Channel	1,2,3,4,5,7	The Blink radio channel	
RF Profile	RF0-RF5	The RF Profile setting	
TX Power	Minimal, Default, Maximal	Tag's transmit power	
Acc mode	 0 – movement detection disabled – Tag will blink continuously 1 low, 2 middle, 3 high – sensitivity of movement detection – Tag goes to sleep mode if there is no movement for longer than 5 seconds 4 low, 5 middle,6 high – sensitivity of movement detection – Tag goes to sleep mode immediately if there is no movement 	Movement Detection	
Random dev	0 – disabled – Tag blinks in defined refresh rate 1 – enabled – Tag blinks in defined refresh rate + random offset	Random deviation is described in chapter Chyba! Nenalezen zdroj odkazů.	
Sensors*	Roll and Pitch – Stream data about the Tag's 3D orientation Raw Data – Stream raw data from accelerometer Turn Off – Don't stream any inertial data	Select the inertial data to be streamed	
Anchor	MAC Address	Select which Anchor will send the configuration wirelessly	
FW**	Older than 3.113 – Firmware older than 3.113 – 3.115 – Firmware version between 3.113 – 3.115	Select Tag's firmware version	



3.116 and newer – Firmware version 3.116 and newer

If you want some settings to remain the same, select "Skip". However, you must always select the current refresh rate, this option cannot be skipped.

- 4) Press the Start/Stop button. The selected Anchor will start sending the new configuration.
- 5) Tag receives configuration messages after the power ON, therefore turn OFF and turn ON Tag.
- 6) When the new settings are being sent, the positioning will be disabled. After the update is done, stop the transmission by clicking the Start/Stop button again.

Always remember to press the "Start/Stop" button again to stop sending the configuration. Positioning is turned off, when an Anchor is sending the new configuration. The RTLS Manager also informs you about this in the top right corner:



7) The changes should be apparent immediately in the List of Online Tags table.

8.2 RTLS Studio version 1.4.0 and higher

 RTLS Studio -> RTLS Manager -> Tag Summary, click on Advanced Setting to access Sensor Settings



 Please select the Tag address, otherwise set it to "All". Then set the parameters that you wish to change. You will need to select actual Tag firmware and also the Anchor address that will broadcast new configuration to the Tag.

The following parameters are available:

Parameter	Value	Description
Refresh rate [ms]	10 – 60000 [ms]	The Tag's refresh rate
Channel	1,2,3,4,5,7	The Blink radio channel
RF Profile	RF0-RF5	The RF Profile setting

^{*} Only Tags with FW 3.116 and newer

^{**} The firmware version of the Tag is also displayed in the Tag Summary



Power	Min-Max	Tag's transmit power
Sleep mode (previously Acc Mode)	Keep alive (5s) Immediate sleep Delayed sleep Disable	Sleep mode for movement detection feature.
Sleep threshold	Low Medium High Custom <4;8001> [mg]	Threshold of acceleration for wakeup the tag from sleep.
FW	FW Version	Select Tag's firmware version
Anchor	MAC Address	Select which Anchor will send the configuration wirelessly

The following advanced parameters are available

Parameter	Value	Description	
	1 – enabled – Tag TX in defined refresh rate + random offset	Option 1 Random deviation enabled – Tag blinks randomly within regular refresh rate. Always use this option as it is required for Aloha.	
	0 – disabled – Tag TX in defined refresh rate	Refresh rate	
Random Deviation		Option 0 Random deviation disabled – Tag blinks in regularly in given refresh rate. This option is for testing purposes only.	
		Refresh rate	
	Value [ms] <100, 129 000 000>	Period for switch Tag to RX mode. Useful for application where Tag needs to be reconfigured remotely.	
Periodical RX		RX have higher priority than TX, therefore if the device is in RX state, the Blink Refresh Rate is not always kept.	
		Be aware this parameter has significant impact on power consumption.	
RX Duration	Value [ms] <50, 60 000>	Duration of each RX. Be aware this parameter has significant impact on power consumption.	
Sensors	Accelerometer Disable	Raw data from each sensor can be sent within extended blink message.	
Accelerometer Dynamic Range	± 2 g ± 4 g	Dynamic range of accelerometer data output.	



	±8g ±16g	
Gyroscope Dynamic Range	± 250 dps ± 500 dps ± 1000 dps ± 2000 dps	N/A
Barometer mode	Low power Normal mode High precision Disable	N/A

3) Press the Start/Stop (Start Update) button. The selected Anchor will start sending the new configuration.



4) Tag receive configuration messages after the power up, therefore turn off and turn on the Tag.


Note: If Periodical RX is enabled you may wait until the tag automatically switches to the RX state and receives the new settings.

- 5) When the new settings are being sent, the positioning will be disabled. After the update is done, stop the transmission by clicking the Start/Stop button again.
- 6) New settings should appear within Online Tags table immediately.




9 Reset Tag to Defaults Settings

- In order to reset the Tag into default, connect it to your computer via USB and open a console application called <u>TeraTerm</u>.
- 2) Open TeraTerm and select the correct port.

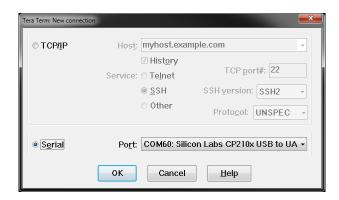

3) Turn the Tag on. The Tag will ask you if you want to load a new configuration. Press Escape or wait for five seconds.

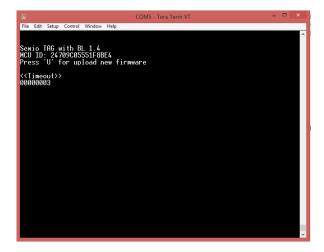

4) Then it will ask you if you want to change the default configuration. Press Enter.



5) Then type "1" and press Enter again. This will reset the Tag to its default configuration.

6) The Tag will be restarted. Skip all following steps by using Escape, or simply wait until the intervals are finished. The Tag will resume to its normal operation once the "Ranging Started" message is shown.




10 Firmware Upgrade

- Hook up USB cable between Tag and computer.
- Open TeraTerm and select the correct port and press OK.




3) Turn the Tag on and press "U" to upload new firmware.

Do not press any keys during the firmware upload, otherwise firmware could be transferred inconsistently.

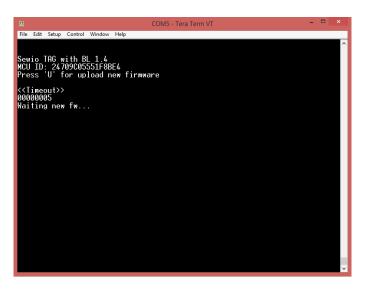


4) Click File -> Transfer -> XMODEM -> Send.




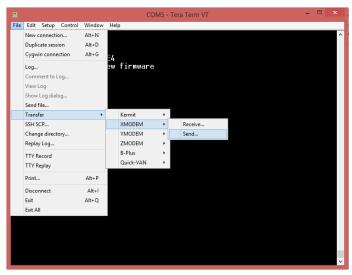

5) Find the configuration file on your computer.

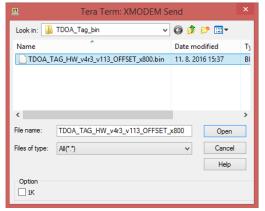

6) Wait until the transfer is done.

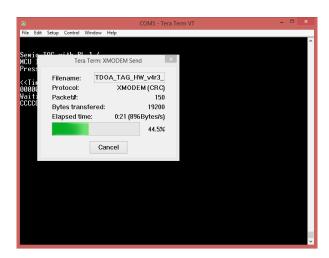

7) Once the "Done" message shows, the firmware was uploaded successfully. Press "R" to restart the Tag.



11 Firmware Changelog

	Improvements	Important Bug Fix
3.113	Support for all RF Profiles	N/A
3.114	Updated UWB Driver	In case of FLASH CRC Error, Tags do not wait for Enter in console and restart itself.
3.115 Latest stable	Battery voltage for both all Tags are within the same range. Improved Console output.	Significantly improved stability
3.116 beta	User Button event, send blink message Inertial unit MPU-9250 support – Tag Li-ion I2C sensor bus is set to 400kHz New message types support (Custom payload, INFO blink contains info about present sensors	
3.118	Significantly rewritten firmware. Added Keep Alive sleep mode Added sleep/wakeup threshold settings Added periodical RX option for Tag IMU, Tag Li-ion, not allowed for Tag Piccolino Added settings for accelerometer dynamic range Tag IMU improvements: Added support for MPU9250 (accelerometer, gyroscope, magnetometer) Added support for DPS310 (barometer, thermometer) Added console/wireless calibration for inertial sensors. Added settings for gyroscope dynamic range Added 3D orientation, output: Quaternions or Tait – Bryan angles sequence. Added raw sensor data output	